






ASSEMBLY INSTRUCTION

SUNLOUNGER EGGEDAL

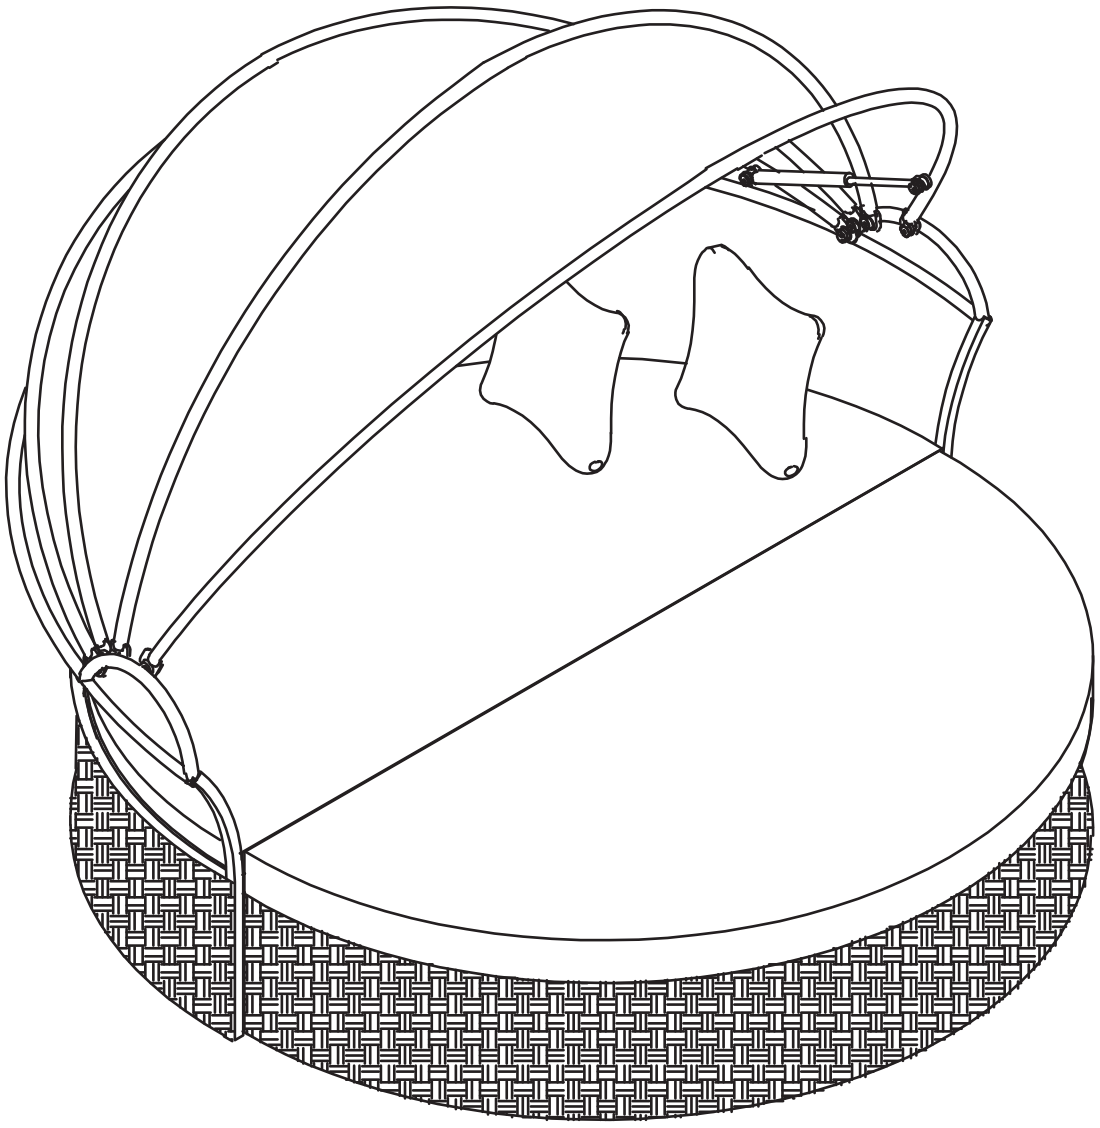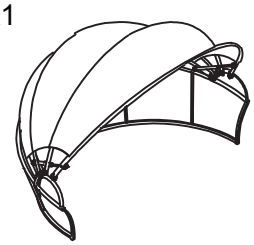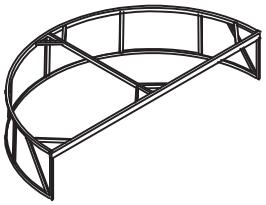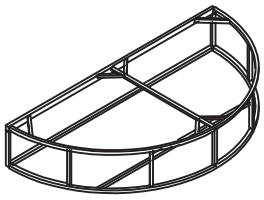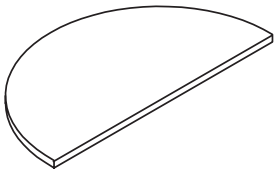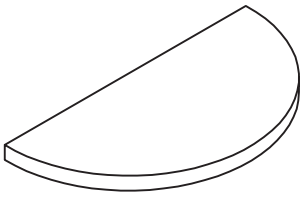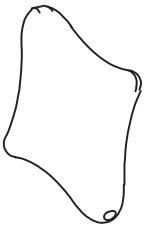


Part List:

Ⓐ x1 	Ⓑ x1 	Ⓒ x1 	Ⓓ x1 
Ⓔ x1 	Ⓕ x4 		


Hardware List:


① x 6 pcs  M6x45mm	② x 6 pcs  M6	③ x 1 pc  Allen Key	


STEP 1

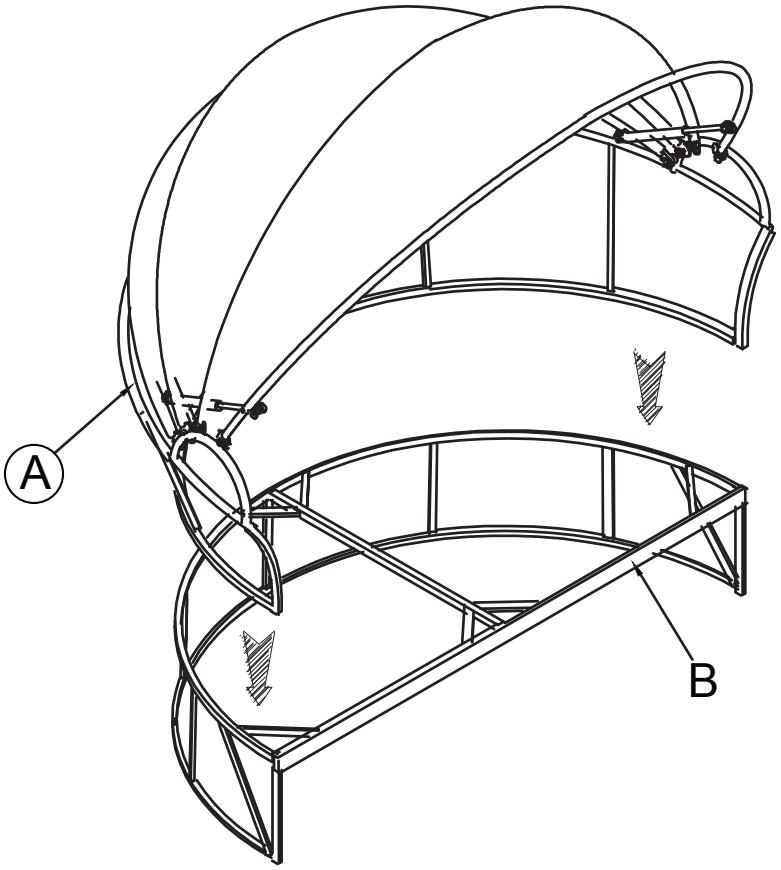

STEP 2

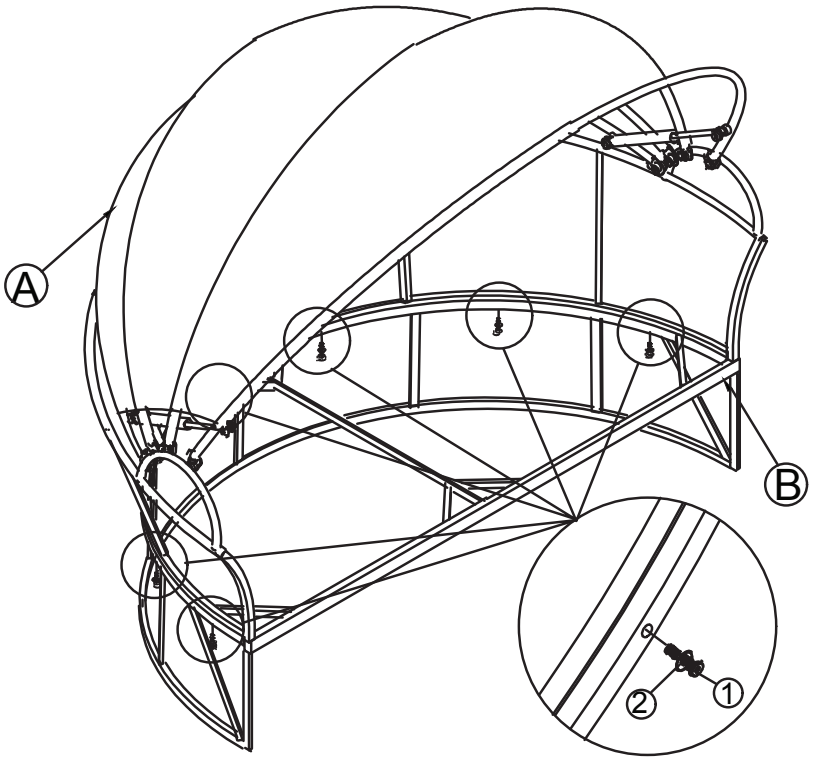








IMPORTANT NOTE:

Do not tighten all screws/bolts until all completely assembled.
Thank you.


STEP 3

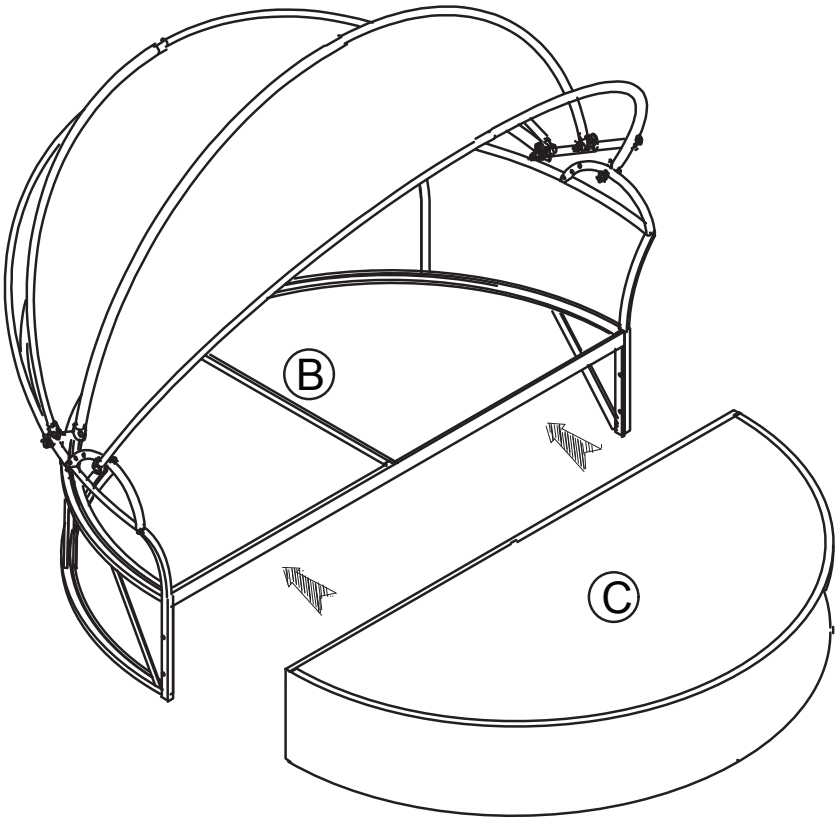






STEP 4

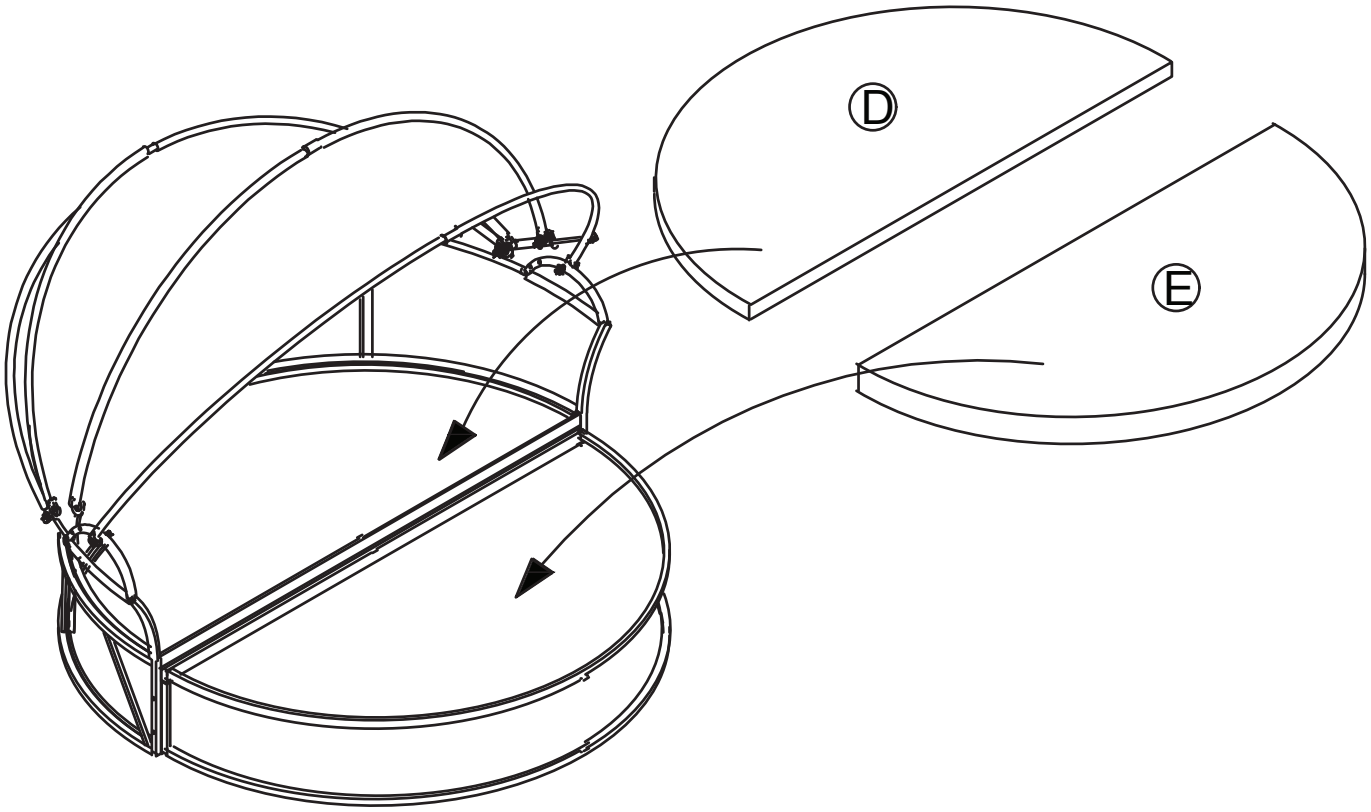

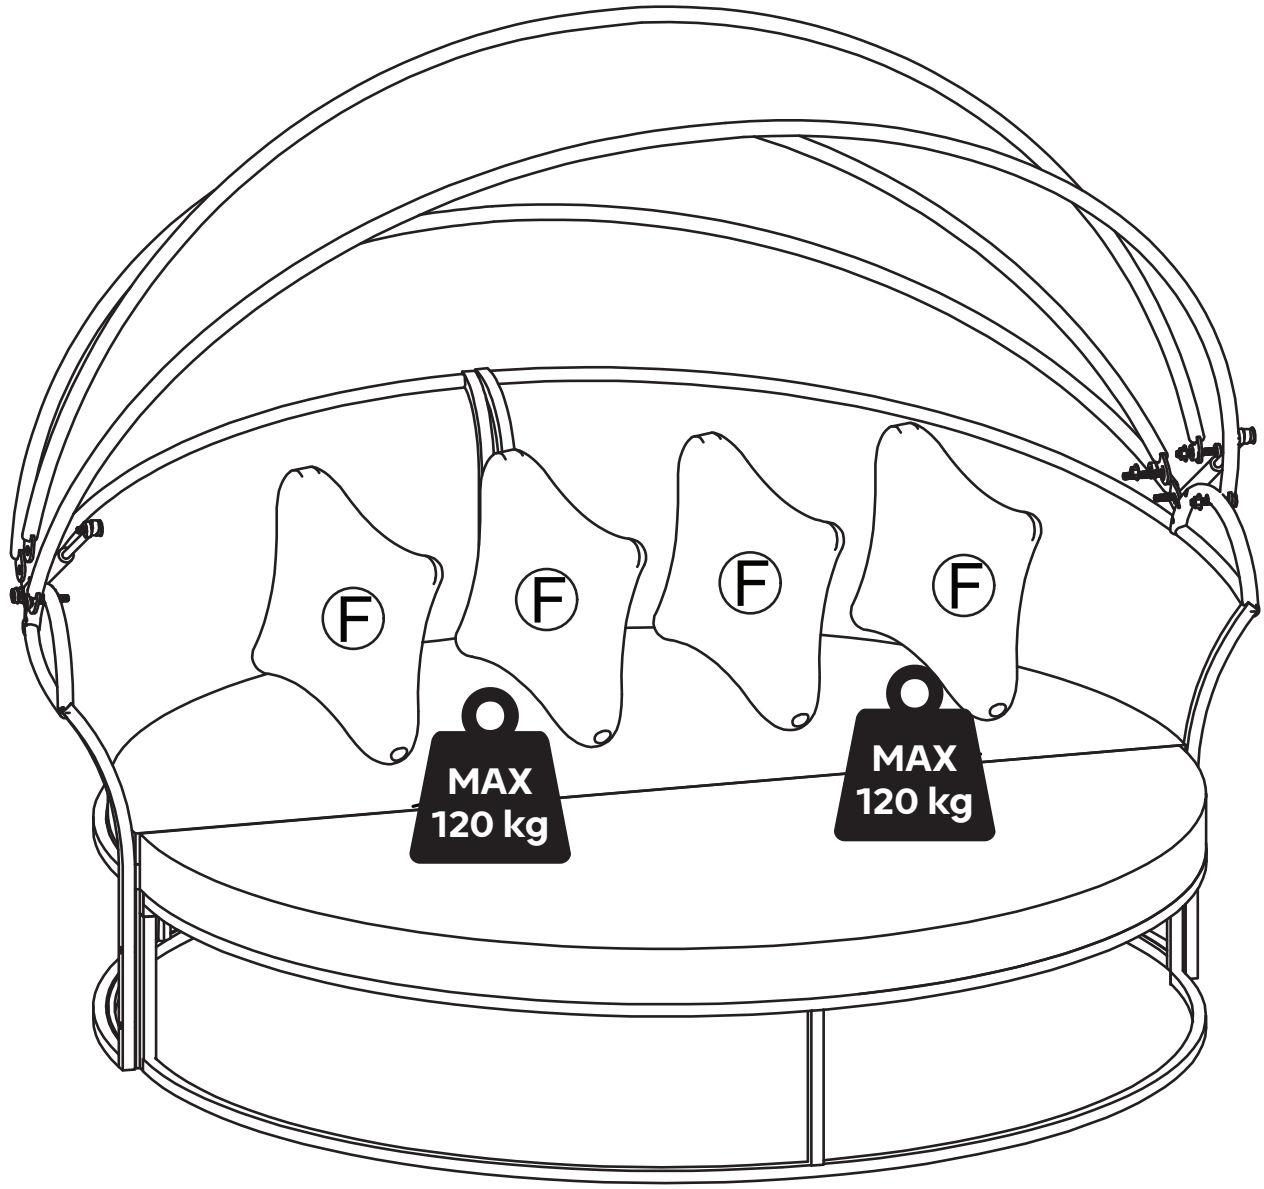

Importer:Designlink GmbH
Am Egelingsberg 8
D-38542 Leiferde
info@dsgnlink.com
PO 502475
Artikel 536976-01